
### YUKEN

# **Relief Modular Valves**

#### Specifications

Model Numbers	Max. Operating Pressure MPa (PSI)	Max. Flow L/min (U.S.GPM)	
MBP-005-*-20	25 (3630)	15 (3.96)	



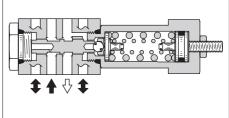

#### Model Number Designation

F-	MBP	-005	-C	-20	*
Special Seals	Series Number	Valve Size	Pres. Adj. Range MPa (PSI)	Design Number	Design Standard
F: Special Seals for Phosphate Ester Type Fluids (Omit if not required)	<b>MBP</b> : Relief Valve for P-Line	005	<b>C</b> : *-16 <sup>*1</sup> (*-2320) <b>H</b> : 7-25 (1020-3630)	20	Refer to ★2


 $\star$  1. See the "Minimum Adjustment Pressure" of the next page for the item marked \*.

★ 2. Design Standards: None ........... Japanese Standard "JIS", European Design Standard and N. American Design Standard


#### Instructions

- The minimum adjustment pressure equals the value obtained from the minimum adjustment pressure characteristics plus the tank line back pressure of the next page. This back pressure should include the value of the T-line pressure drop characteristics of the valves stacked to the base plate side of the modular valve.
- To make pressure adjustment, loosen the lock nut and turn the pressure adjustment screw clockwise or anti-clockwise. For an increase of pressure, turn the screw clockwise. Be sure to re-tighten the lock nut firmly after making adjustment to the pressure.
- In case of a small flow, the setting pressure may become unstable. To avoid this, refer to the minimum flow characteristic curve of the next page and use the valve within a range as shown with \_\_\_\_\_\_.


#### Graphic Symbol

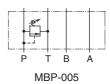


### Typical Performance Characteristics

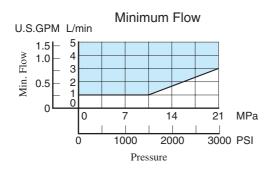

Hydraulic Fluid: Viscosity 35 mm<sup>2</sup>/s (164 SSU), Specific Gravity 0.850

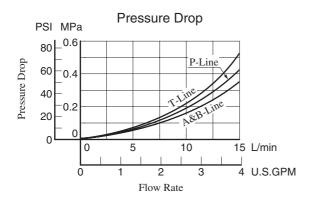


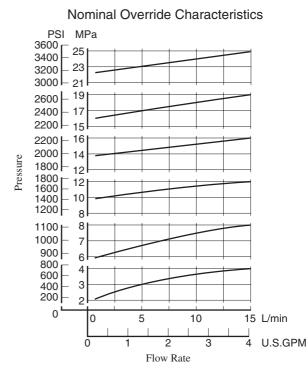

Min. Adjustment Pressure PSI MPa Min. Adjustment Pressure 200 -1.4 1.2 160 120 \_0.8 80 -0.4 40 0 0 10 15 L/min 0 5 ō 3 4 U.S.GPM 1 2 Flow Rate

F

# YUKEN

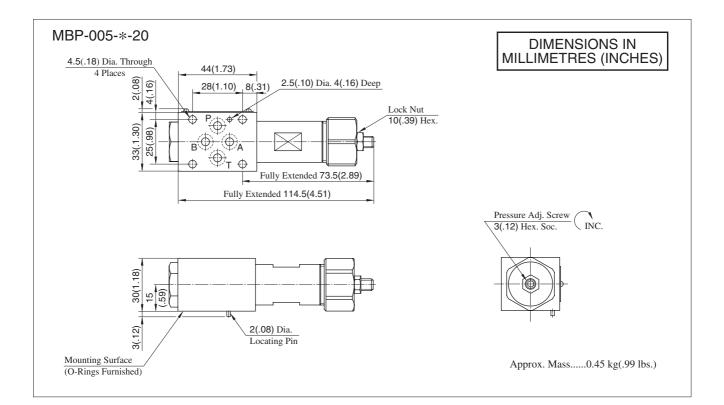

#### Spare Parts List

